Sensors & Controls

x/e-touchPANEL 02 Release Notes



Table of Contents

Table of Contents

1. About this document	. 3
2. Release Notes V1.17 - changes compared to V1.14	. 4
3. Release Notes V1.14 - changes compared to V1.13	. 5
4. Release Notes V1.13 - changes compared to V1.12	. 7
5. Release Notes V1.12 - changes compared to V1.11	10
6. Release Notes V1.11 - changes compared to V1.07	. 11
7. Release Notes V1.07 - changes compared to V1.01	21
8. Release Notes V1.01 - changes compared to x-touchpanel or e-touchpanel	25

About this document

1. About this document

This document shows the history of released x/e-touch platform software versions. Each chapter describes one software version and its changes compared to the preceding version.

This includes information about solved software bugs, implemented new features and how to activate or operate them.

The following documents include further information:

- _ Datasheet: http://www.tridonic.com/com/en/download/data_sheets/x_e-touchpanel_02_en.pdf
- _ Operation manual: http://www.tridonic.com/com/en/download/technical/Manual_x_e_touchpanel_02_en.pdf

2. Release Notes V1.17 - changes compared to V1.14

In some cases, it was possible that the x/e-touchPANEL in the emergency application crashed when the TestBook.bin file from the x/e-touchPANEL was downloaded via em-LINK software version 1.3.1 and older.

This firmware version solves this behavior.

To be effective the em-LINK software must also be updated to a software version equal or higher than 1.3.1.2

A CAUTION!

_ Consider that it is necessary to upgrade also the bootloader if the installed firmware version on the panel is lower than V1.13.

New Feature Cyclic Communication Test

Automatic Tests				
Function test	Duration test	Comm.test 🗹 cyclic		
🗹 weekly	🗆 monthly 🛛 daily			
every 2nd week	🗹 quarterly	12:00		
🗆 monthly	🗆 every 6 months			
	🗆 yearly			
extended	OK Can	cel		

in general it is recommended and enough to do the daily communication test.

In some use cases it may be required to cyclically do the communication test.

The benefit of this feature is, that if a device is not responding immediately this will be recognized from the Panel and visualized.

The Algorithm is programmed so that every 4 seconds an communication test is done.

The risk of this feature is that the devices connected to the the Panel will be polled regular and every failure of the communication test will be written to the test book. So it may happen, if the user does not react immediately, the test-book will be "spammed" with communication test failure entries!

For that reason this feature should be used with care!

3. Release Notes V1.14 - changes compared to V1.13

This update will remove the behaviour that it is not possible to connect to the panel via ethernet.

Hop to upgrade the bootloader and the firmware is described in release notes V1.13.

 Consider that it is necessary If it is not possible to considered description below! 	ary to upgrade also the bootloader if the installed firmware version on the panel is lower than V1.13. nect to the panel via ethernet, it is necessary to clear the JAVA cache, for more informations see the
How to clear the JAVA-Cache	control panel Java:

🛃 Java Control Panel	
General Java Security Advanced	
About	
View version information about Java Control Panel.	
	About
Network Settings	
Network settings are used when making Internet connections. I use the network settings in your web browser. Only advanced these settings.	By default, Java will users should modify
Net	work Settings
Temporary Internet Files	
Files you use in Java applications are stored in a special folder f later. Only advanced users should delete files or modify these s	for quick execution settings.
Setting	View
ОК Са	ancel Apply

Choose Settings in the Temporary Internet Files section:

Temporary Files Settings
Keep temporary files on my computer.
Location Select the location where temporary files are kept:
arald.mueller\AppData\LocalLow\Sun\Java\Deployment\cache Change
Disk Space Select the compression level for JAR files: None Set the amount of disk space for storing temporary files: 32768 MB
Delete Files Restore Defaults
OK Cancel

Choose Delete Files in the Temporary Files Settings:

Delete Files and Applications
Delete the following files?
 Trace and Log Files Cached Applications and Applets Installed Applications and Applets
OK Cancel

Choose Cached Applications and Apples and press OK

After this procedure the connection to the panel should be possible!

4. Release Notes V1.13 - changes compared to V1.12

This update will improve the behaviour of some panels which have a corrupted bootloader and show a black screen after mains interruptions.

This update consists of two parts. Part 1 will update the bootloader, part 2 will update the FW.

Make sure you are first updating the bootloader and then updating the FW.

How to	
_ Part one update bootloader	





Remove the USB stick and start with Part two

_ Part two update FW





5. Release Notes V1.12 - changes compared to V1.11

_ updated Java Plugin

Because Java has increased the security settings, it was necessary to create exceptions in the Java security settings to be able to remotely connect to the x/e-touchpanel and control the lights. With this update this isn't necessary any more.

Release notes DALI x/e-touchpanel 02 | 06-2019 | en

Release Notes V1.11

6. Release Notes V1.11 - changes compared to V1.07

_ TA_mobile Webpage

Call up a webpage on the x/e-touchpanel.

This makes it possible to control light from Android and Apple devices via WLAN.

This page can be edited and customised

Supported Commands
Goto Scene1-16
OFF
DAPxxx (0-255)
UP
Down
Startsequenz
Stopsequenz
Resetsequenz
Grup 1-16
(Grup not supported for scene- commands)

(more informations in the operation manual)

<u>To be able to use this Function the x/e-touchpanel has to be connected to ethernet and you router needs WLAN.</u>





_ DALI routing from DALI A to DALI B

Now it is possible to send commands from other control modules (e.g. DALI XC, TOUCHpanel 02) from DALI line A to line B and vice versa.

This Function can be activated or deactivated.

ŀ	How to					
Colour Temperature			Go to <u>main menu</u> .			
	Sche	dule (SDL)		Sequence	(SQ)	Select <u>Configuration</u>
	Schedule list (SDLL) Scenes (S)		(S)			
		Addr	essing/gro	uping		
		С	Configuratio	on 🔉		
		<u> </u>	>	4	\	

Display System Names Layout TCP/IP		
Program version: x/e-touchPANEL V1.10 www.tridonic.com	Th	
	He	
Reset to factory defaults.	>A	
Action at net recovery DALI Numbering: ☑ 063 □ 11	64	
Application USB		
😚 🔅 🗘	>	

Go to <u>system</u> tab.

There you will see the new field DALI Routing.

Here you can choose if and how the commands should be routed

_ Colour Temperature

Colour Temperature allows you to change the Colour Temperature over the day.

This function is <u>not</u> available for the Emergency application.

How to		
Colour Temperature		Go to <u>main menu</u>
Schedule (SDL)	Sequence (SQ)	Select <u>Colour Temperature</u>
Schedule list (SDLL)	Scenes (S)	
Addressing	/grouping	
Configu	iration 🔉	
😚 🌼 C) 💠 🌳 ,	
6000K		In this window you can set the min. and max. Colourtemperature.
5000К		Also the min. and max. Light Level can be set.
4000K 3000K		If you set the min. and max. Light Level to 101% then no Light Level will be send.
6h 8h 10h 12 Colour Temperature MIN: 2000	h 14h 16h 18h I TC 🗘 MAX: 6500 TC 🗘	To test the function select the Test field.
Light Level MIN:	🗘 MAX: 100 % 🗘	To start the function select the Start field.
		<<
		Select to go back to main menu.

_ Running Sequence or Schedule can be stopped with Broadcast OFF or MAX

Stop a sequence or schedule also with other controls (e.g. DALI XC) when sending Broadcast OFF or MAX command.



_ EM-Application Duration Test select test month.

How t	How to				
Test times Commissioning Test		Commissioning Test	Go to the main menu in EM-Application		
Identification Tool		ation Tool	Select <u>Test times</u>		
	Identification DALI A	Identification DALI B			
Addressing/grouping		g/grouping			
Configuration		uration			
(» 🕑			



_ Rename Groups, Scenes, Sequences, Schedules.

It is possible to rename groups, scenes, sequences and schedules directly on your Computer.

How to over ethernet					
		Connect over ethernet to your x/e-touchpanel			
x/e-touchPANEL		Select more			
Szene A		Select more			
Szene B					
Szene C		• more			
Szene D		to see the File Up/Download Page			
OFF					
🕎 🔅 🏠	4				
▶more					

X/e-touchPAREL - File Up/Download	Select <u>get text file containing all name strings</u>
Configuration file: • set least file configuration all name atriogs • pet config file	
User interface bitmap sample png file: > UL_Layoot.png	
Firmware update, configuration file and UI- bitmap upload: Choose File 10 file chosen upload	
accordinate files and schemeth7MELLBames.txt: Text file containing name strings to be changed. screenssverging: Screen saver image file (100:448) puede, PNG format). UL_Lavyout.png: Licer defined button tists; PNG format. TAmobile.thm; TAmobile.tpg: FTNL interface for mobile devices. TextBook.thm: Sector set book file (arrowing application only). TextBook.thm: Sector set book file (arrowing application only). Xetouch_YScox.zip: Software update file.xox= version number.	
Preturn to main page	
<pre> </pre> Names file for xetouchFANEL: (BASIC application) <pre>- Edit names and upload changed file to the xetouchFANEL. <pre>- The file can also be placed on an USB acid for update:</pre></pre>	In the new window
<pre>kutoRun/LTUpdate/home/yetouchPANEINames.txt</pre>	Right click and select Save as
<pre></pre>	
<pre><g3 name="Gruppe D"></g3> <g4 name="Gruppe D"></g4> <g5 name="Gruppe D"></g5> <g6 name="Gruppe P"></g6> <g6 name="Gruppe P"></g6> </pre>	
<pre><g1 name="Gcuppe G"></g1> <g3 name="Gcuppe H"></g3> <g3 name="Gcuppe H"></g3> <g1 name="Gcuppe J"></g1> <g1 name="Gcuppe J"></g1></pre>	
<g11 name="Gruppe K"></g11> <g12 name="Gruppe L"></g12>	
<g13 name="Gruppe N"></g13> Back <g14 name="Gruppe N"></g14> Forward	
Cold name - Caupy of // Reload Reload	
Scene Names Print	
<s1 name="Szene \n"></s1> Translate to English <s2 name="Szene B"></s2> View page source	
Cas name area c/>	
File name: netouchPANELName:	Save the File as
Seve as type: Text Document	
	xetouchpanelNames.txt
	! Attention The xetouch software is case sensitive. Pay attention to
	correct spelling.
xetouchPANELNames - Notepad	Search and open the saved file (e.g. in Notepad)
<pre>rile Edit Format View Heip <!-- Names file for xetouchPANEL: (BASIC application) - Edit names and unload changed file to the xetouchPANEL.</pre--></pre>	Now you can edit the names of
- The file can also be placed on an USB stick for update: AutoRun/LTUpdate/home/xetouchPANELNames.txt 	Groups, Scenes, Schedules, Sequences
Group Names	Each Application has his own template and has to be downloaded
<pre><di name="TEST CHANGE GROUP NAME"></di> <g1 name="Office2"></g1> <g2 name="office2"></g2> <g2 name="office2"></g2> <g3 name="Composition"></g3> <td>separately.</td></pre>	separately.
<pre><g4 name="Gruppe D"></g4> <g5 name="Gruppe E"></g5> <g6 name="Gruppe F"></g6></pre>	When you have changed the Names save the File
<g7 name="Gruppe G"></g7> <g8 name="Gruppe H"></g8> <g9 name="Gruppe T"></g9>	
<g9 1="" name="Gruppe"></g9> <g10 name="Gruppe J"></g10>	xeroucnpaneiNames.txt

x/e-touchPANEL - File Up/Download Configuration file: 9 set test file containing all name strings 9 set config file 9 set config file User userface bitmap sample png file: 9 UL_avout-ong File Not Lavout ang Use Configuration file and UT- bitmap upload: Libooxe file Not any Configuration file and UT- bitmap upload: Libooxe file Not any Configuration file and UT- bitmap upload: Libooxe file Not any Configuration file and UT- bitmap upload: Use Configuration file and UT- bitmap upload: Configu		Select <u>choose File</u> on the File Up/Download Page		
TestBookbin: Restore test book file (emergency application only). xetbook_pXxxx.zpp: Software update file, xxxx version number. ▶ return to main page				
Firmware update, configuration file and UI- bitmap up Choose File xetouchPANELNames.txt upload Recognized files are: xetouchPANELNames.txt: Text file containing name str screensaver.png: Screen saver image file (800x480 pis UI_Layout.png: User defined button texts, PNG format. TAmobile.htm, TAmobile.jpg: HTML interface for mobi ConfigData.bin: Restore configuration file. TestBook.bin: Restore test book file (emergency applica xetouch_Vxxx.zip: Software update file. xxx= version of	load: ings to be changed. cels, PNG format). le devices. ation only). number.	Select <u>upload</u> .		
File Uplood	TRIDONIC Remote Access	You will see that the file upload was OK. Select <u>return to main page</u>		
Name file upload OK. The file xetouchPANEUkames.txt has been stored, the dispay will non-reduct for the changes to take effect. I return to upload page I return to main page				
TEST CHANGE office2 Gruppe C	Gruppe D	Result		
		Changed Name of Group 1		
▼ ◀•▶ ▼	•			
OFF OFF OFF	OFF			
<u></u>				

How to over USB

Colour Ter	mperature	Go to main menu, select Configuration
Schedule (SDL)	Sequence (SQ)	
Schedule list (SDLL)	Scenes (S)	
Addressing	g/grouping	
Config Config	uration 🔉	
Display System Names La Program version: x/e-touch www.tridon Device name: x/e-touch Reset to factory defaults Action at net recovery Application	yout TCP/IP PANEL V1.10 ic.com PANEL DALI Routing: ☑ A=>B ⓑ ☑ B=>A DALI Numbering: ☑ 063 □ 164 USB	Go to system and select USB
Display System Names La USB backup Configuration (ConfigD Configurat	yout TCP/IP ata.bin) ELNames.txt) bin) ad Cancel	Select Names and then Save. Now the file xetouchpanelNames.txt will be downloaded to your USB. To restore the data select Load.

_ Change Design Background colour





_ Tunable White

Colour temperature from cooler to warmer and vice versa is now changed in mirek steps.

DT8 Command 232 (Step cooler)

DT8 Command 233 (Step warmer)

7. Release Notes V1.07 - changes compared to V1.01

_ New E-mail functionality for EMERGENCY application implemented

Display System	Names Emergency TCP/IP eMail				
send email:	□ if test OK				
	☐ if test failed				
to address:	someone@yourcompany.com				
from address:	etouch@yourcompany.com				
SMTP server:	mail.yourcompany.co send test email				
login:	loginname				
password:	****				
<i>i</i> i	b 🔅 🔶 🖒				

Important: this will only work on Port 25

Now it is possible to send E-mails. There are four options available.

Send e-mail: 'if test OK', 'if test failed', 'also for communication test' and 'send test e-mail'.

Send e-mail: 'if test OK' and 'if test failed' can be used together or separately.

Send email 'also for communication test' can only be used if option 'if test failed' is selected

_ New automated communication test for EMERGENCY application implemented

The communication test is checking if all ballasts are reachable over the DALI-Bus.

Communication test will be done automatically daily. Start time can be set by user. Default start time is 00:00.

If the communication test is positive no entry will be written in the test protocol only if the communication test fails the result will be logged in the test protocol.

ŀ	How to		
	Test times	Commissioning Test	Go to <u>main menu.</u>
Identification Tool		ation Tool	Select <u>Test times.</u>
	Identification DALI A	Identification DALI B	
Addressing/grouping		g/grouping	
	Configuration		
	 i i	÷ 🕑	
	_		

	Automatic Tests				
	Function test	Duration test	Comm.test		
	🗆 manual	🗆 manual	daily:		
	🗹 weekly	monthly	00:00		
	🗆 every 2nd week	🗹 quarterly			
	□ monthly	🗆 every 6 months			
		🗆 yearly			
	ovtondod		7		
	extended				
Automatia Taata					
1	Automatic Tests				
	Automatic Tests Function test	Duration test	Comm.test		
	Automatic Tests Function test	Duration test	Comm.test daily:		
	Automatic Tests Function test Imanual	Duration test	Comm.test daily: 		
	Automatic Tests Function test Imanual Meekly every 2nd week	Duration test □ manual □ monthly ☑ quarterly	Comm.test daily: 00:00		
	Automatic Tests Function test manual & weekly every 2nd week monthly	Duration test manual monthly dirterly me: (hh:mm:ss)	Comm.test daily: 00:00		
	Automatic Tests Function test manual weekly every 2nd week monthly	Duration test ☐ manual ☐ monthly @ quarterly me: (hh:mm:ss) ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	Comm.test daily: 00:00		
	Automatic Tests Function test manual weekly every 2nd week monthly ortend	Duration test manual monthly me: (hh:mm:ss) OK Cancel	Comm.test daily: 00:00		

_ A running test is now restarted in case of power interruption

In case of power interruption while a function or duration test is running in the past the test was gone. If this happens now the test will be restarted after mains on.

_ New " register reminder page"

This new function remembers to register on Tridonic webpage.

Registered uses will be informed with automatic E-Mails about new Software updates.



_ Added USB Drive support - save and load for TestBook.bin and ConfigData.bin

ŀ	How to					
	Test times	Commissionina Test		Go to <u>main menu.</u>		
	Identification Tool			Select Configuration.		
	identification					
	Identification DALI A	Identification DALI B				
	Addressin	g/grouping				
	Config	uration				
	1 🖻 🐇	» ©				
	Display System Names En	nergency TCP/IP eMail		Select <u>system</u> tab.		
	Language: ▼	r English Framelight				
	On touch	Configuration				
	⊠ Screen- saver	D Lock panel				
	1 🖻 🔅	🕴 🔷 😫				
ſ	Dienlay System Names En			Select USB.		
	Program version: x/e-touch	PANEL V1.07				
	Device name: x/e-touchF	PANEL				
Reset to factory defaults. Action at net recovery						
	Application	USB				
	 i i) 💠 🍫				



_ Bug fixes

-e-touchConfiguration.bin of previous generation of hardware can now be loaded on the x/e-touchpanel. Need to rename to ConfigData.bin before upload.

-updated keyboard support with ethernet connection.

-minor text changes on system pages, more space for the tabs

8. Release Notes V1.01 - changes compared to x-touchpanel or e-touchpanel

All functions of the x-touchpanel and the e-touchpanel are also included into the x/e-touchpanel.

_ x-touch and e-touch functionality choosable in the x/e-touch software

Within the configuration of the panel it is easily possible to choose between the different applications (BASIC, COLOR, PLUG and EMERGENCY)



only grouping, no device search implemented into adressing/grouping

Within the Addressing/Grouping it is possible to choose the function "Grouping only, no search for devices". This function allows the user to skip the time consuming addressing and directly enter the grouping window.

1	Addressing	method	:			
	1	Select a □ Sy	addressing i stem exten	method: sion		
Reinitialization						
	☐ Grouping only, no search for devices DALI Communication Test: ☑ DALI-A □ DALI-B					
	< Previous		Nex	t >	Cancel	

_ new communication test implemented into addressing/grouping

Within the Addressing/Grouping it is possible to choose the function "DALI Communication Test". When checking the checkbox for the single DALI circuit the x/e-touchpanel is alternately sending out "Recall Max" and "Recall Min" in steps of two seconds. "

_ choosable modern design in basic mode

Within the configuration it is possible to choose between different designs. The selectable designs are "Classic", "Classic Grey", "Modern" and "User defined". If the selected Design is "User defined", the design that is defines in the file UI_Layout is used.



New group overview is added to the home screen

A new screen was added to the home screens. Within this screen an overview of all groups is visible and all groups can be easily controlled without changing the screen.

D	Gruppe A	Gruppe E	Group I	Group M
	Gruppe B	Gruppe F	Group J	Group N
	Gruppe C	Group G	Group K	Group O
	Gruppe D	Group H	Group L	Group P
	_			
*				

_ operating of tunable white (colour temperature along the planckian locus; included in scenes, sequences and schedules)

Device Type 8 converters are recognised by the x/e-touchpanel and can be grouped. The colour temperature of the DT8 can be changed along the planckian locus with arrows that appear on groups that include DT8 devices. By pressing on the blue arrow the colour temperature is increased and is getting colder. By pressing on the red arrow the colour temperature is decreases and is getting warmer.

To set the colour temperature to a defined value the point between the arrows has to be pressed.

DT8 devices can also be included into scenes. When a tunable white device is detected in a group an input field is added to the scene window. By pressing onto the input field it is possible to enter the specific colot temperature for this scene. To set the color temperature to MASK the value "0" has to be entered into the input field.



_ counting for addresses, groups and scenes is changeable

Within the configuration it is possible to choose the counting of the addresses, groups and scenes. The DALI standard defines a counting from 0 to 63 for addresses and a counting from 0 to 15 for scenes and groups. For better understanding the counting can be changed to 1 to 64 for addresses or 1 to 16 for scenes and groups.



MSensor included

The MSensor is recognised by the x/e-touchpanel and can be grouped.