TRIDONIC



TC-SEL

EM PRO G2, 220 - 240 V 50/60 Hz

PRO version

EM Inverter

Product description

- Emergency lighting supply unit with DALI interface and automatic test function
- For linear and compact fluorescent lamps
- Low-profile casing (21 x 30 mm cross-section)
- 5-year guarantee

Properties

- Non maintained operation
- DALI interface for testing and monitoring
- 1 or 3 h rated duration
- Operating time selectable with plug (duration link)
- Compatible with all electronic ballasts
- 5-pole technology: 4-pole lamp changeover and delayed power switching for the ballast
- High-frequency ac operation of the lamp
- Power control technology ensures maximum emergency ballast lumen factors (EBLF) for all lamps
- Gentle on the lamp thanks to preheated lamp start and permanent cathode heating in emergency mode
- 5.5 min. boost start for rapid heating of the lamp, more light in the startup phase and optimum lamp life
- Standard and high ballast lumen factor for 1 hour types
- Electronic multi-level charge system
- "Rest mode" function
- Addressing function, patented ("EZ easy addressing")
- EZ addressing tool can be supplied
- Two-colour status display LED
- Deep discharge protection
- Very low energy consumption from the battery after activation of the deep discharge protection
- Short-circuit-proof battery connection
- Polarity reversal protection for battery Tests:
- Status of the battery
- Status of the lamp
- Charge condition
- Function test
- Duration test

Batteries

- High-temperature cells
- NiCd or NiMH batteries
- D- Cs- or LA cells
- 4-year design life
- 1-year guarantee
- For battery compatibility refer to chapter "Ballast-Lumen-Factor (BLF)"



Standards, page 10

For wiring diagrams and installation examples, page 11

EM Inverter




EM PRO G2, 220 - 240 V 50/60 Hz

PRO version

Technical data

recillical data	
Rated supply voltage	220 – 240 V
Mains frequency	50 / 60 Hz
Mains current	60 mA
Rated power	< 10 W
Overvoltage protection	320 V (for 1 h)
Maximum operating voltage (U-OUT of the ECG)	460 V
Battery charging time 1 h	10 h
Battery charging time 3 h	15 h
Discharge current, Standard BLF	1 A
Time to light	1.2 s from detection of emergency event
Leakage current (PE)	0.5 mA
Ambient temperature ta	-5 +60 °C
Max. casing temperature to	+70 °C
Mains voltage changeover threshold	according to EN 60598-2-22
Min. lamp starting temperature (emerger cy operation)	n5 °C
Type of protection	IP20

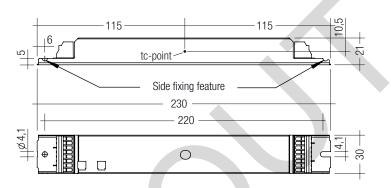

Note: Control gear supplied with duration link in 3 hours position. Remove duration link for 1 hour duration. Duration link must be set before battery and mains connection.

Ordering data

Type [⊕]	Article number	Battery type	Number of cells	Packaging, carton	Packaging, pallet	Weight per pc.
Rated operating time 1/3	h, Standard BLF					
EM 03 PRO G2	89800197	NiCd	3	10 pc(s).	700 pc(s).	0.156 kg
EM 04 PRO G2	89800200	NiCd	4	10 pc(s).	700 pc(s).	0.156 kg
EM 05 PRO G2	89800203	NiCd	5	10 pc(s).	700 pc(s).	0.156 kg
EM 06 PRO G2	89800206	NiCd	6	10 pc(s).	700 pc(s).	0.156 kg
EM 03 PRO NIMH G2	89800332	NiMH	3	10 pc(s).	700 pc(s).	0.156 kg
EM 04 PRO NIMH G2	89800333	NiMH	4	10 pc(s).	700 pc(s).	0.156 kg
EM 05 PRO NIMH G2	89800334	NiMH	5	10 pc(s).	700 pc(s).	0.156 kg
EM 06 PRO NIMH G2	89800335	NiMH	6	10 pc(s).	700 pc(s).	0.156 kg

Specific technical data

Type ^①		Charge current / Battery charg	ling time
	Initial charge / duration	Fast recharge / duration	Trickle charge, continuously
Rated operating time 1 h, Standard BLF			
EM 03 PRO G2	130 mA / 20 h	210 mA / 10 h	50 mA
EM 04 PRO G2	130 mA / 20 h	210 mA / 10 h	50 mA
EM 05 PRO G2	130 mA / 20 h	210 mA / 10 h	50 mA
EM 06 PRO G2	130 mA / 20 h	210 mA / 10 h	50 mA
EM 03 PRO NIMH G2	130 mA / 20 h	210 mA / 10 h	130 mA / 4 min. – 0 mA / 16 min.
EM 04 PRO NIMH G2	130 mA / 20 h	210 mA / 10 h	130 mA / 4 min. – 0 mA / 16 min.
EM 05 PRO NIMH G2	130 mA / 20 h	210 mA / 10 h	130 mA / 4 min. – 0 mA / 16 min.
EM 06 PRO NIMH G2	130 mA / 20 h	210 mA / 10 h	130 mA / 4 min. – 0 mA / 16 min.
Rated operating time 3 h, Standard BLF			
EM 03 PRO G2	300 mA / 20 h	330 mA / 15 h	130 mA
EM 04 PRO G2	300 mA / 20 h	330 mA / 15 h	130 mA
EM 05 PRO G2	300 mA / 20 h	330 mA / 15 h	130 mA
EM 06 PRO G2	300 mA / 20 h	330 mA / 15 h	130 mA
EM 03 PRO NIMH G2	300 mA / 20 h	330 mA / 15 h	200 mA / 4 min. – 0 mA / 16 min.
EM 04 PRO NiMH G2	300 mA / 20 h	330 mA / 15 h	200 mA / 4 min. – 0 mA / 16 min.
EM 05 PRO NIMH G2	300 mA / 20 h	330 mA / 15 h	200 mA / 4 min. – 0 mA / 16 min.
EM 06 PRO NIMH G2	300 mA / 20 h	330 mA / 15 h	200 mA / 4 min. – 0 mA / 16 min.

[®] EM = Emergency

RoHS

ACCES-SORIES

Test switch EM3

Product description

- For connection to the emergency lighting unit
- For checking the device function
- Plug connection



Ordering data

Туре	Article number	Packaging,	bag Packaging, ca	rtonWeight per p	C.
Test switch EM 3	89899956	25 pc(s).	200 pc(s).	0.013 kg	

ACCES-SORIES

Status indication bi-colour LED

Product description

- Two-colour status display LED
- Green: system OK, red: fault
- Plug connection



Ordering data

Type	Article number	Packaging	g, Packaging,	Weight
Туре	Al ficie fidilibei	bag	carton	per pc.
LED EM bi-colour, 1.0 m CON	89800273	25 pc(s).	200 pc(s).	0.015 kg
LED EM bi-colour, high brightness HO 1.0 m CON	89800275	25 pc(s).	200 pc(s).	0.015 kg
LED EM bi-colour, 0.6 m CON	89800474	25 pc(s).	200 pc(s).	0.005 kg
LED EM bi-colour, high brightness HO 0.6 m CON	89800475	25 pc(s).	200 pc(s).	0.005 kg
LED EM bi-colour, 0.3 m CON	89800274	25 pc(s).	200 pc(s).	0.005 kg
LED EM bi-colour, high brightness HO 0.3 m CON	89800276	25 pc(s).	200 pc(s).	0.005 kg

Ballast lumen factor (BLF) in %

	Duration				1/3 h Star	ndard BLF			
	Cells	3 cells	4 cells	5 cells	6 cells	3 cells	4 cells	5 cells	6 cells
	Туре	EM 03 PRO G2		EM 05 PRO G2	EM 06 PRO G2	EM 03 PRO NIMH G2	EM 04 PRO NiMH G2	EM 05 PRO NIMH G2	EM 06 PRO NiMH G2
	Art. no.	89800197	89800200	89800203	89800206	89800332	89800333	89800334	89800335
Lamp type	Wattage		BLF	in emergency	/ lighting mod	de in % for rat	ed operating	time	
T5	6W								
	8 W	32.4	40.0			32.4	40.0		
	13 W								
ECO T5	13 W		22.0				22.0		
	20 W		15.4				15.4		
	25 W				16.8				16.8
	32 W				13.4				13.4
	45 W				8.1				8.1
	50 W				5.8				5.8
	73 W				4.1				4.1
T5 FH	14 W		24.0				24.0		
	21 W			18.0				18.0	
	28 W				15.0				15.0
	35 W				11.0				11.0
T5 FQ	24 W		15.6				15.6		
	39 W				10.0				10.0
	49 W				6.7				6.7
	54 W				5.3				5.3
	80 W				4.2				4.2
T8	15 W		17.0				17.0		
	18 W		18.0				18.0		
	30 W								
	36 W	7	11.0				11.0	-	
	38 W	7							
	58 W			7.5				7.5	
	70 W				4.5				4.5
Туре	Article				A! L I				
	number				Assignabi	e batteries			
Accu-NiCd 3A 55	28002773	3 h							
Accu-NiCd 3B 55	89800384	3 h							
Accu-NiCd 4A 55	89800089		3 h						
Accu-NiCd 4B 55	89800385		3 h						
Accu-NiCd 4C 55	28002775		3 h						
Accu-NiCd 5A 55	28002774			3 h					

				/ O * V			_	7.5				7.5
Technology and capacity	Design	Number of cells	Туре	Article number				Assignabl	e batteries			
	Stick	3	Accu-NiCd 3A 55	28002773	3 h							
	Side by side	3	Accu-NiCd 3B 55	89800384	3 h							
	Stick	4	Accu-NiCd 4A 55	89800089		3 h						
NiCd 4 Ah	Side by side	4	Accu-NiCd 4B 55	89800385		3 h						
D cells	Stick + Stick	2+2	Accu-NiCd 4C 55	28002775		3 h						
	Stick	5	Accu-NiCd 5A 55	28002774			3 h					
	Stick + Stick	2 + 3	Accu-NiCd 5C 55	89800090			3 h					
	Stick + Stick	3+3	Accu-NiCd 6C 55	89800388				3 h				
	Stick	3	Accu-NiMH 3A	28002088	1 h				1 h			
	Stick	4	Accu-NiMH 4A	28002089		1 h				1 h		
NiMH 2.2 Ah Cs cells	Stick	5	Accu-NiMH 5A	28002090			1 h				1 h	
C3 CEII3	Stick	6	Accu-NiMH 6A	28002091				1 h				1 h
	Stick + Stick	3+3	Accu-NiMH 6C	28002092				1 h				1 h
	Stick	3	Accu-NiMH 4Ah 3A CON	89800441					3 h			
	Stick	4	Accu-NiMH 4Ah 4A CON	89800442						3 h		
NiMH 4 Ah LA cells	Stick + Stick	2 + 2	Accu-NiMH 4Ah 4C CON	89800438						3 h		
LA Cells	Stick + Stick	2 + 3	Accu-NiMH 4Ah 5C CON	89800439							3 h	
	Stick + Stick	3 + 3	Accu-NiMH 4Ah 6C CON	89800440								3 h

Ballast lumen factor (BLF) in %

EM PRO G2 for compact lamps, 3 or 1 h

	Duration				1/3 h Star	dard BLF			
	Cells	3 cells	4 cells	5 cells	6 cells	3 cells	4 cells	5 cells	6 cells
	Туре	EM 03 PRO G2	EM 04 PRO G2	EM 05 PRO G2	EM 06 PRO G2	EM 03 PRO NIMH G2	EM 04 PRO NIMH G2	EM 05 PRO NIMH G2	EM 06 PRO NiMH G2
	Article no.	89800197	89800200	89800203	89800206	89800332	89800333	89800334	89800335
Lamp type	Wattage		BLF	in emergency	lighting mod	le in % for rat	ed operating	time	
TC-DD	10 W								
	16 W		23.6				23.6	7 4	
	21 W		15.4				15.4		
	28 W		13.7				13.7		
	38 W				10.3				10.3
	55 W				5.9				5.9
TC-SEL	7 W								
	9 W	18.3	27.6			18.3	27.6		
	11 W	17.4	31.0			17.4	31.0		
TC-DEL	10 W								
	13 W	18.6	25.6			18.6	25.6		
	18 W		17.0				17.0		
	26 W		14.4				14.4		
TC-TEL®	13 W	17.0 / 10.9	25.2 / 17.1			17.0 / 10.9	25.2 / 17.1		
	18 W		17.5 / 14.1	17.8 / 21.0			17.5 / 14.1	17.8 / 21.0	
	26 W [®]		11.5 / 10.0	13.0	14.0		11.5 / 10.0	13.0	14.0
	32 W [®]			14.0 / 5.6	x / 8.0			14.0 / 5.6	x / 8.0
	42 W				7.4 / 7.3				7.4 / 7.3
	57 W								
T5c	22 W		16.9				16.9		
	40 W				7.4				7.4
	55 W				5.1				5.1
TC-F	18 W		18.0				18.0		
	24 W			21.0				21.0	
	36 W			13.0				13.0	
TC-L	18 W		17.4				17.4		
	24 W			17.0				17.0	
	36 W			12.0				12.0	
	40 W			8.8				8.8	
	55 W				5.4				5.4
TC-R	14 W		20.0				20.0		
	17 W		15.0				15.0		
er Type	Article				Assignabl	e batteries			
	number				Assignable	e Darreries	_		
Accu-NiCd 3A 55	28002773	3 h							
Accu-NiCd 3B 55	89800384	3 h							
Accu-NiCd 4A 55	89800089		3 h						
Accu-NiCd 4B 55	89800385		3 h						
Accu-NiCd 4C 55	28002775		3 h						
Accu-NiCd 5A 55	28002774			3 h					
Accu-NiCd 5C 55	89800090			3 h					
Accu-NiCd 6C 55	89800388				3 h				
Accu-NiMH 3A	28002088	1 h				1 h			

Design	Number of cells	Туре	Article number				Assignabl	e batteries			
Stick	3	Accu-NiCd 3A 55	28002773	3 h							
Side by side	3	Accu-NiCd 3B 55	89800384	3 h							
Stick	4	Accu-NiCd 4A 55	89800089		3 h						
Side by side	4	Accu-NiCd 4B 55	89800385		3 h						
Stick + Stick	2+2	Accu-NiCd 4C 55	28002775		3 h						
Stick	5	Accu-NiCd 5A 55	28002774			3 h					
Stick + Stick	2+3	Accu-NiCd 5C 55	89800090			3 h					
Stick + Stick	3+3	Accu-NiCd 6C 55	89800388				3 h				
Stick	3	Accu-NiMH 3A	28002088	1 h				1 h			
Stick	4	Accu-NiMH 4A	28002089		1 h				1h		
Stick	5	Accu-NiMH 5A	28002090			1 h				1 h	
Stick	6	Accu-NiMH 6A	28002091				1 h				1 h
Stick + Stick	3+3	Accu-NiMH 6C	28002092				1 h				1h
Stick	3	Accu-NiMH 4Ah 3A CON	89800441					3 h			
Stick	4	Accu-NiMH 4Ah 4A CON	89800442						3 h		
Stick + Stick	2 + 2	Accu-NiMH 4Ah 4C CON	89800438						3 h		
Stick + Stick	2 + 3	Accu-NiMH 4Ah 5C CON	89800439							3 h	
Stick + Stick	3 + 3	Accu-NiMH 4Ah 6C CON	89800440								3 h
	Stick Side by side Stick Side by side Stick + Stick Stick + Stick Stick + Stick	of cells Stick 3 Side by side 4 Side by side 4 Stick + Stick 2 + 2 Stick + Stick 2 + 3 Stick + Stick 3 + 3 Stick 4 Stick 5 Stick 5 Stick 5 Stick 5 Stick 5 Stick 3 + 3 Stick 3 Stick 4 Stick + Stick 2 + 2 Stick + Stick 2 + 2 Stick + Stick 2 + 3	of cells Stick 3 Accu-NiCd 3A 55 Side by side 3 Accu-NiCd 4B 55 Stick 4 Accu-NiCd 4B 55 Side by side 4 Accu-NiCd 4B 55 Stick + Stick 2 + 2 Accu-NiCd 5C 55 Stick + Stick 2 + 3 Accu-NiCd 5C 55 Stick + Stick 3 + 3 Accu-NiCd 6C 55 Stick 3 Accu-NiMH 3A Stick 4 Accu-NiMH 4A Stick 5 Accu-NiMH 5A Stick 6 Accu-NiMH 6A Stick + Stick 3 + 3 Accu-NiMH 6C Stick 3 Accu-NiMH 4Ah 3A CON Stick 4 Accu-NiMH 4Ah 4A CON Stick + Stick 2 + 2 Accu-NiMH 4Ah 4C CON Stick + Stick 2 + 2 Accu-NiMH 4Ah 4C CON Stick + Stick 2 + 3 Accu-NiMH 4Ah 5C CON	of cells number Stick 3 Accu-NiCd 3A 55 28002773 Side by side 3 Accu-NiCd 3B 55 89800384 Stick 4 Accu-NiCd 4A 55 89800089 Side by side 4 Accu-NiCd 4B 55 89800385 Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 Stick 4 Accu-NiMH 4A 28002089 Stick 5 Accu-NiMH 5A 28002090 Stick 6 Accu-NiMH 6A 28002091 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah 3A CON 89800441 Stick 4 Accu-NiMH 4Ah 4A CON 89800442 Stick + Stick 2 + 2 Accu-NiMH 4Ah 4C CON <td< td=""><td>of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 Side by side 4 Accu-NiCd 4B 55 89800385 Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 1 h Stick 4 Accu-NiMH 4A 28002089 Stick 5 Accu-NiMH 5A 28002090 Stick 6 Accu-NiMH 6A 28002091 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah A CON 89800441 Stick 4 Accu-NiMH 4Ah A CON 89800442 Stick + Stick <td< td=""><td>of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 6A 28002090 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah 3A CON 89800441 Stick 4 Accu-NiMH 4Ah ACON 89800442 Stick + Stick 2 + 2 Accu-NiMH</td><td>of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 4B 55 89800089 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick py side 4 Accu-NiCd 4C 55 28002775 3 h Stick py side 5 Accu-NiCd 5C 55 28002774 3 h Stick 5 Accu-NiCd 5C 55 89800090 3 h Stick py side 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick py side 3 + 3 Accu-NiCd 5C 55 89800088 8 Stick 3 + 3 Accu-NiCd 6C 55 89800388 8 Stick 3 - Accu-NiMH 3A 28002088 1 h Stick 3 - Accu-NiMH 4A 28002089 1 h Stick 5 - Accu-NiMH 5A 28002090 1 h Stick py side 4 - Accu-NiMH 6A 28002091 1 h Stick py side 4 - Accu-NiMH 4Ah 3A CON 89800441 89800442</td><td>Assignable Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiMH 3A 28002088 1 h Stick 4 Accu-NiMH 4A 28002099 1 h Stick 5 Accu-NiMH 6A 28002090 1 h Stick 6 Accu-NiMH 6A 28002092 1 h Stick 3 Accu-NiMH 4Ah ACON 8980044</td><td>Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 5A 28002090 1 h Stick 3 3 Accu-NiMH 6A 28002091 1 h Stick + Stick 3 Accu-NiMH 4Ah 3A CON 89800441 3 h Stick + Stick 2 + 2 <</td><td>Stick 3 Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Stick 4 Accu-NiCd 4B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 898002774 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 89800388 3 h Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 4A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3+3 Accu-NiMH 6C 28002092 1 h 3 h Stick + Stick 3 Accu-NiMH 4Ah ACON 89800441 3 h 3 h Stick + Stick 2+2</td><td>Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800900 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 5A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3 + 3 Accu-NiMH 6C 28002092 1 h 1 h Stick + Stick 3 - Accu-NiMH 4Ah 3A CON 89800441 3 h 3 h Stick + Stick 4 - Accu-NiMH 4Ah 4A CON 89800438 3 h</td></td<></td></td<>	of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 Side by side 4 Accu-NiCd 4B 55 89800385 Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 1 h Stick 4 Accu-NiMH 4A 28002089 Stick 5 Accu-NiMH 5A 28002090 Stick 6 Accu-NiMH 6A 28002091 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah A CON 89800441 Stick 4 Accu-NiMH 4Ah A CON 89800442 Stick + Stick <td< td=""><td>of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 6A 28002090 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah 3A CON 89800441 Stick 4 Accu-NiMH 4Ah ACON 89800442 Stick + Stick 2 + 2 Accu-NiMH</td><td>of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 4B 55 89800089 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick py side 4 Accu-NiCd 4C 55 28002775 3 h Stick py side 5 Accu-NiCd 5C 55 28002774 3 h Stick 5 Accu-NiCd 5C 55 89800090 3 h Stick py side 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick py side 3 + 3 Accu-NiCd 5C 55 89800088 8 Stick 3 + 3 Accu-NiCd 6C 55 89800388 8 Stick 3 - Accu-NiMH 3A 28002088 1 h Stick 3 - Accu-NiMH 4A 28002089 1 h Stick 5 - Accu-NiMH 5A 28002090 1 h Stick py side 4 - Accu-NiMH 6A 28002091 1 h Stick py side 4 - Accu-NiMH 4Ah 3A CON 89800441 89800442</td><td>Assignable Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiMH 3A 28002088 1 h Stick 4 Accu-NiMH 4A 28002099 1 h Stick 5 Accu-NiMH 6A 28002090 1 h Stick 6 Accu-NiMH 6A 28002092 1 h Stick 3 Accu-NiMH 4Ah ACON 8980044</td><td>Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 5A 28002090 1 h Stick 3 3 Accu-NiMH 6A 28002091 1 h Stick + Stick 3 Accu-NiMH 4Ah 3A CON 89800441 3 h Stick + Stick 2 + 2 <</td><td>Stick 3 Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Stick 4 Accu-NiCd 4B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 898002774 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 89800388 3 h Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 4A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3+3 Accu-NiMH 6C 28002092 1 h 3 h Stick + Stick 3 Accu-NiMH 4Ah ACON 89800441 3 h 3 h Stick + Stick 2+2</td><td>Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800900 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 5A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3 + 3 Accu-NiMH 6C 28002092 1 h 1 h Stick + Stick 3 - Accu-NiMH 4Ah 3A CON 89800441 3 h 3 h Stick + Stick 4 - Accu-NiMH 4Ah 4A CON 89800438 3 h</td></td<>	of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick 5 Accu-NiCd 5A 55 28002774 Stick + Stick 2+3 Accu-NiCd 5C 55 89800090 Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 6A 28002090 Stick 3 Accu-NiMH 6C 28002092 Stick 3 Accu-NiMH 4Ah 3A CON 89800441 Stick 4 Accu-NiMH 4Ah ACON 89800442 Stick + Stick 2 + 2 Accu-NiMH	of cells number Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 4B 55 89800089 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick py side 4 Accu-NiCd 4C 55 28002775 3 h Stick py side 5 Accu-NiCd 5C 55 28002774 3 h Stick 5 Accu-NiCd 5C 55 89800090 3 h Stick py side 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick py side 3 + 3 Accu-NiCd 5C 55 89800088 8 Stick 3 + 3 Accu-NiCd 6C 55 89800388 8 Stick 3 - Accu-NiMH 3A 28002088 1 h Stick 3 - Accu-NiMH 4A 28002089 1 h Stick 5 - Accu-NiMH 5A 28002090 1 h Stick py side 4 - Accu-NiMH 6A 28002091 1 h Stick py side 4 - Accu-NiMH 4Ah 3A CON 89800441 89800442	Assignable Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 + 3 Accu-NiMH 3A 28002088 1 h Stick 4 Accu-NiMH 4A 28002099 1 h Stick 5 Accu-NiMH 6A 28002090 1 h Stick 6 Accu-NiMH 6A 28002092 1 h Stick 3 Accu-NiMH 4Ah ACON 8980044	Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800090 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h Stick 3 Accu-NiMH 4A 28002089 1 h Stick 5 Accu-NiMH 5A 28002090 1 h Stick 3 3 Accu-NiMH 6A 28002091 1 h Stick + Stick 3 Accu-NiMH 4Ah 3A CON 89800441 3 h Stick + Stick 2 + 2 <	Stick 3 Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Stick 4 Accu-NiCd 4B 55 89800384 3 h Stick 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2+2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 898002774 3 h Stick + Stick 2+3 Accu-NiCd 5C 55 89800388 3 h Stick + Stick 3+3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 4A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3+3 Accu-NiMH 6C 28002092 1 h 3 h Stick + Stick 3 Accu-NiMH 4Ah ACON 89800441 3 h 3 h Stick + Stick 2+2	Assignable bafferies Stick 3 Accu-NiCd 3A 55 28002773 3 h Side by side 3 Accu-NiCd 3B 55 89800384 3 h Stick 4 Accu-NiCd 4A 55 89800089 3 h Side by side 4 Accu-NiCd 4B 55 89800385 3 h Stick + Stick 2 + 2 Accu-NiCd 4C 55 28002775 3 h Stick + Stick 2 + 3 Accu-NiCd 5C 55 89800900 3 h Stick + Stick 3 + 3 Accu-NiCd 6C 55 89800388 3 h Stick 3 Accu-NiMH 3A 28002088 1 h 1 h Stick 4 Accu-NiMH 5A 28002089 1 h 1 h Stick 5 Accu-NiMH 6A 28002091 1 h 1 h Stick + Stick 3 + 3 Accu-NiMH 6C 28002092 1 h 1 h Stick + Stick 3 - Accu-NiMH 4Ah 3A CON 89800441 3 h 3 h Stick + Stick 4 - Accu-NiMH 4Ah 4A CON 89800438 3 h

 $^{^{\}circ}$ The first figure is related to non-amalgam lamps, the second figure is realted to amalgam lamps (e.g. 14/9,5).

[©] For best performance of 26W and 32W TC lamps, and especially amalgam filled lamps, we recommend the use of EM 06 PRO G2.

Emergency Ballast Lumen Factor (EBLF) in $\%^{\circ}$

EM PRO G2, 3 or 1 h

	Duration				1/3 h Stan	dard BLF			
	Cells	3 cells	4 cells	5 cells	6 cells	3 cells	4 cells	5 cells	6 cells
	Туре	EM 03 PRO G2	EM 04 PRO G2	EM 05 PRO G2	EM 06 PRO G2	EM 03 PRO NiMH G2	EM 04 PRO NiMH G2	EM 05 PRO NiMH G2	EM 06 PRO
	Article no.	89800197	89800200	89800203	89800206	89800332	89800333	89800334	89800335
Lamp type	Wattage				ency lighting mod				
T5	6W				one, ngilling inc		operaning initial		
	8W	29.0	36.0			29.0	36.0		
	13 W								
ECO T5	13 W		19.7				19.7		
	20 W		13.9				13.9		
	25 W				14.9				14.9
	32 W				11.9				11.9
	45 W				7.3				7.3
	50 W				5.9				5.9
	73 W				4.1				4.1
T5 FH	14 W		22.0				22.0		
	21W			17.0				17.0	
	28 W				14.0				14.0
	35 W				10.5				10.5
T5 FQ	24 W		14.1		01		14.1		01
	39 W				9.1				9.1
	49 W				6.4 5.7				6.4 5.7
	80 W				4.2				4.2
T8	15 W		16.0		4.2		16.0		4.2
10	18 W		16.5				16.5		
	30 W		10.5				10.5		
	36 W		10.2				10.2		
	38 W								
	58 W			6.5				6.5	
	70 W				3.7				3.7
TC-DD	10 W								
	16 W		20.0				20.0		
	21 W		13.9				13.9		
	28 W		12.2				12.2		
	38 W				8.9				8.9
	55 W				5.5				5.5
TC-SEL	7 W								
	9 W	13.6	21.8			13.6	21.8		
	11 W	16.0	28.0			16.0	28.0		
TC-DEL	10 W								
	13 W	13.9	21.3			13.9	21.3		
	18 W		15.5				15.5		
	26 W	407.407	13.0			4/ = 16 -	13.0		
TC-TEL®	13 W	14.3 / 8.2	21.8 / 9.7	457.4444		14.3 / 8.2	21.8 / 9.7	457.4444	
	18 W 26 W [®]		14.5 / 8.6 10.4 / 8.5	15.3 / 14.1 9.7	110		14.5 / 8.6	15.3 / 14.1 9.7	110
	32 W ³		10.4 / 8.5		11.9		10.4 / 8.5		11.9
	42 W			12.8 / 4.8	x / 7.7 7.2 / 6.7			12.8 / 4.8	x / 7.7 7.2 / 6.7
	57 W				7.2 / 0.7				7.2 / 0.7
T5c	22 W		14.7				14.7		
150	40 W		14.7		7.7		14.7		7.7
	55 W				4.4				4.4
TC-F	18 W		16.5				16.5		
	24 W			19.5			.0.0	19.5	
	36 W			12.0				12.0	
TC-L	18 W		15.3				15.3		
	24 W			15.5				15.5	
	36 W			10.5				10.5	
	40 W			8.4				8.4	
	55 W				4.8				4.8
TC-R	14 W		18.2				18.2		
	17 W		13.3				13.3		

^① According to EN 61347-2-7: 2006

 $^{^{\}circ}$ The first figure is related to non-amalgam lamps, the second figure is realted to amalgam lamps (e.g. 14/9,5).

 $^{^{\}circledR}$ For best performance of 26W and 32W TC lamps, and especially amalgam filled lamps, we recommend the use of EM 06 PRO G2.

Lamp current in emergency operation in mA

EM PRO G2, 3 or 1 h

	Duration				1/3 h Stan	dard BLF			
	Cells	3 cells	4 cells	5 cells	6 cells	3 cells	4 cells	5 cells	6 cells
	Туре	EM 03 PRO G2	EM 04 PRO G2	EM 05 PRO G2	EM 06 PRO G2	EM 03 PRO NiMH G2	EM 04 PRO NiMH G2	EM 05 PRO NiMH G2	EM 06 PRO NiMH G2
	Article no.	89800197	89800200	89800203	89800206	89800332	89800333	89800334	89800335
Lamp type	Wattage			Lamp current in	emergency operat				
T5	6W				and game, opera.		or operating time		
	8W	31.5	40.0			31.5	40.0		
	13 W								
ECO T5	13 W		34.0				34.0		
	20 W		34.2				34.2		
	25 W				24.0				24.0
	32 W				20.3				20.3
	45 W				17.2				17.2
	50 W				12.9				12.9
	73 W				15.4				15.4
T5 FH	14 W		26.0				26.0		
	21 W			22.0				22.0	
	28 W				19.0				19.0
	35 W				15.0				15.0
T5 FQ	24 W		32.9		10.0		32.9		40.5
	39 W				19.2				19.2
	49 W				14.0				14.0
	54 W				12.0				12.0
	80 W		/20		15.2		/20		15.2
Т8	15 W		42.0 38.0				42.0 38.0		
	30 W		26.3				26.3		
	36 W		20.3				20.3		
	38 W								
	58 W			22.8				22.8	
	70 W			22.0	13.0			22.0	13.0
TC-DD	10 W				15.0				15.0
10 00	16 W		29.5				29.5		
	21W		34.2				34.2		
	28 W		22.9				22.9		
	38 W				21.8				21.8
	55 W				20.5				20.5
TC-SEL	7 W	_							
	9 W	35.8	44.5			35.8	44.5		
	11 W	28.0	32.0			28.0	32.0		
TC-DEL	10 W								
	13 W	26.8	30.4			26.8	30.4		
	18 W		31.4				31.4		
	26 W		20.0				20.0		
TC-TEL®	13 W	27.0 / 26.0	32.5 / 31.8			27.0 / 26.0	32.5 / 31.8		
	18 W		31.9 / 31.4	32.4 / 32.3			31.9 / 31.4	32.4 / 32.3	
	26 W		26.7	29.9	29.9		26.7	29.9	29.9
	32 W			21.0 / 19.0	x / 17.0			21.0 / 19.0	x / 17.0
	42 W				14.0 / 12.0				14.0 / 12.0
	57 W								
T5c	22 W		30.1				30.1		**
	40 W				16.4				16.4
TOF	55 W		100		16.3		100		16.3
TC-F	18 W		40.0	420			40.0	/20	
				42.0				42.0	
TC-I	36 W		41.4	26.0			41.4	26.0	
TC-L			41.4	74.0			41.4	74.0	
	24 W			36.0				36.0 25.0	
	36 W 40 W			25.0 16.0				16.0	
	55 W			10.0	16 /-			10.0	14.7.
					16.4		20.9		16.4
TC-R	14 W		20.9						

 $^{^{\}odot}$ The first figure is related to non-amalgam lamps, the second figure is realted to amalgam lamps (e.g. 15/16).

Testing:

DALI Control

A DALI command from a suitable control unit can be used to initiate function and duration tests at individually selected times. Status flags are set for report back and data logging of results.

When a DALI bus has not been connected or when a DALI bus is connected but the DALI default DELAY and INTERVAL times have not been re-set by sending appropriate DALI commands, then the EM PRO G2 will conduct self-tests in accordance with the default times set within the EEPROM. These default times are factory pre-set, in accordance with the DALI standard EN 62386-202, to conduct an automatic function test every 7 days and a duration test every 52 weeks. Since the DELAY time is factory pre-set to Zero, all units are tested at the same time. Test times can be changed with a command over the DALI bus.

The DELAY and INTERVAL time values must be re-set when the emergency system test times are to be scheduled by a DALI control and monitoring system.

Note that once the default values have been set to Zero, tests will only be conducted following a command from the control system. If the DALI bus is disconnected the EM PRO G2 does not revert to self-testing mode.

Note: If the battery is connected the DALI communication is only possible after power reset.

Addressing

The EM PRO G2 includes the EZ easy addressing system which allows addressing and identification by using the bi-colour LED. Binary address codes given by the LED can be simply converted to the DALI addresses 0 to 63. For single handed addressing using this method it is necessary to send a broadcast ident command every 3 to 9 seconds. During this command the main fluorescent lamp will be switched off and the LED will flash the 6 bit binary address preceded by a 3 second start indication period.

Commissioning

After installation of the luminaire and initial connection of the mains supply and battery supply to the EM PRO G2 the unit will commence charging the batteries for 20 hours (initial charge). Afterwards the module will conduct a commissioning test for the full duration. The 20 hours recharge occurs also if a new battery is connected or the module exits the rest mode condition. The following automatic commissioning duration test is only performed when a battery is replaced and fully charged (after 20 hrs) and the interval time is not set to zero, otherwise the system is expected to perform the testing.

Functional test

The time of day and frequency of the 30 seconds function test can be set by the DALI controller. The default setting is a 30 seconds test on a weekly basis.

Duration test

The time of day and frequency of the duration test can be set by the DALI controller. The default setting is a duration test conducted every 52 weeks.

Prolong time

Prolong time can be set by the DALI controller. This is the delay time between return of the mains supply and the end of the emergency operation. The default prolong time is set as 0 minutes as specified within the DALI standard.

Rest Mode / Inhibit Mode

Emergency operation is automatically started when the mains supply is switched off. If the Rest Mode is activated, the discharging of the battery will be minimized by switching off the lamp. If the Inhibit Mode has been activated before the mains supply is switched off, Rest Mode will be automatically switched on if the mains supply is switched off within 15 minutes. Rest Mode and Inhibit Mode can be initiated by the DALI controller. The REST command has to be sent after the mains supply has been disconnected and whilst the EM PRO G2 is in emergency operation. The INHIBIT command has to be sent while the EM PRO G2 is supplied by mains.

After a mains reset the EM PRO G2 exits the Rest Mode. Rest Mode and Inhibit Mode can both be disabled by sending the RE-LIGHT/RESET INHIBIT command.

Test switch

An optional test switch can be wired to each EM PRO G2. This can be used to to:

- initiate a 5 seconds function test: press 200 ms < T < 1s
- execute function test as long as switch pressed: press > 1s
- reset selftest timer (adjust local timing): press > 10 s

Timer reset functionality

The timer for function and duration test can be set to a particular time of the day by either pressing the test switch for longer than 10 seconds or cycling the unswitched line supply 5 times within 1 minute. The timer adjustment will enable the test start time to be defined manually at time in day when the timer was reset. It will also disable the adaptive test algorithm thereby forcing the unit to perform the test at the same time rather than it being defined by the adaptive algorithm. This function will only work provided the interval time is greater than zero (automatic test mode enabled). The delay timer value set when the unit was commissioned will be reloaded in order to randomise the tests between adjacent units.

DALI Controller

DALI controllers and hardware/software solutions are available from Tridonic. Please refer to the Lighting controls section.

Life-time

Average life-time 50,000 hours under rated conditions with a failure rate of less than 10 %. Average failure rate of 0.2 % per 1000 operating hours.

Ballast compatibility

The EM PRO G2 emergency units use 5 pole technology and are compatible with most high frequency ballasts on the market, however it is important to check that the U-OUT rating of the ballast does not exceed the value specified under "Technical data".

Mechanical details

Channel manufactured from galvanised steel.

Cover manufactured from white pre-coated steel.

LED bi-colour status indicator

- Green / red
- Mounting hole 6.5 mm diameter, 1 1.6 thickness
- $\bullet\,$ Lead length 0.3 m / 1.0 m
- Insulation rating: 90 °C
- Plug connection

Test switch

- Mounting hole 7.0 mm diameter
- Lead length 0.55 m
- Plug connection

Battery leads

- Quantity: 1 red and 1 black
- Length: 1.3 m
- Wire type: 0.5 mm² solid conductor
- Insulation rating: 90 °C

Battery end termination: push on 4.8 mm receptacle to suit battery spade fitted with insulating cover

Module end termination: 8.0 mm stripped insulation

Two-piece batteries are supplied with a 200 mm lead with 4.8 mm receptacles at each end and insulating covers to connect the separate sticks together.

Technical data batteries

Accu-NiCd

4.2 / 4.5 Ah

Battery voltage/cell 1.2 V Cell type D

Case temperature range

to ensure 4 years design life +5 °C to +55 °C

Max. short term temperature (reduced life-time) 70 °C

Max. number discharge cycles 4 cycles per year plus 4 cycles during

comissioning 6 months

Max. storage time

Accu-NiMH

2.2 Ah

Battery voltage/cell 1.2 V Cell type Cs

Case temperature range to ensure 4 years design life

When used with EM xx PRO G2 +5 °C to +50 °C When used with EM xx PRO NiMH G2 +5 °C to +55 °C

Max. short term temperature (reduced life-time) 70 °C

Max. number discharge cycles 4 cycles per year plus 30 cycles during

comissioning 12 months

Max. storage time

4.0 Ah

Battery voltage/cell 1.2 V Cell type LA

Case temperature range to ensure 4 years design life

When used with EM xx PRO G2 +5 °C to +45 °C When used with EM xx PRO NiMH G2 +5 °C to +50 °C

Max. short term temperature (reduced life-time) 70

Max. number discharge cycles 4 cycles per year plus

30 cycles during comissioning

Max. storage time 12 months

For further informations refer to corresponding battery datasheet.

Storage, installation and commissioning

Relevant information about storage conditions, installation and commissioning are provided in the battery datasheets.

Batteries

Connection method: 4.8×0.5 mm spade tag welded to end of cell For stick packs this connection is accessible after the battery caps have been fitted

To inhibit inverter operation disconnect the batteries by removing the connector from the battery spade tag.

For battery data see separate data sheet.

Status indication

System status is indicated by a bi-colour LED and by a DALI status flag.

LED indiction	Status	Comment
Permanent green	System OK	AC mode
Fast flashing green	Function test	
(0,1 sec on – 0,1 sec off)	underway	
Slow flashing green	Duration test	
(1 sec on – 1 sec off)	underway	
Red LED on	Load failure	Open circuit / Short circuit / lamp failure
Slow flashing red (1 sec on – 1 sec off)	Battery failure	Battery failed the duration test or function test / Battery is defect or deep discharged/ Incorrect battery voltage
Fast flashing red	Charging failure	Incorrect charging current
(0,1 sec on – 0,1 sec off)		
Double pulsing green	Inhibit mode	Switching into inhibit mode via controller
Binary transmission of address	Address	Duving address identification made
via green/red LED	identification	During address identification mode
Green and red off	DC mode	Battery operation (emergency mode)

Isolation and electric strength testing of luminaires

Electronic devices can be damaged by high voltage. This has to be considered during the routine testing of the luminaires in production.

According to IEC 60598-1 Annex Q (informative only!) or ENEC 303-Annex A, each luminaire should be submitted to an isolation test with 500 Vpc for 1 second. This test voltage should be connected between the interconnected phase and neutral terminals and the earth terminal. The isolation resistance must be at least $2\,\mathrm{M}\Omega$.

As an alternative, IEC 60598-1 Annex Q describes a test of the electrical strength with 1,500 Vac (or 1,414 x 1,500 Vbc). To avoid damage to the electronic devices this test must not be conducted.


Note:

Basic insulation between supply and battery circuit.

Electrical connections

An earthed starting aid is recommended. The module should be earthed by the fixings used to attach it to the luminaire.

Wiring Lamp/ballast/supply

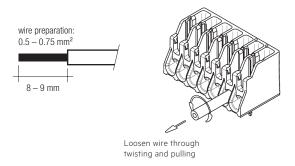

IDC interface

 solid wire with a cross section of 0.5 mm² according to the specification from IDC terminals

Maximum lamp lead capacitance

terminals 5 and 6 (* hot leads) 100 pF $^{1)}$ terminals 3 and 4 200 pF $^{1)}$

 9 Note: care should be taken not to exceed the total maximum lamp lead capacitance for HF ballast. Leads should always be kept as short as possible.

Duration link selection

Duration	Usage duration link						
3 h	With link						
1 h	Without link						

Control gear supplied with duration link in $\overline{\bf 3}$ hours position.

The position of the link will only be read on first power up. If it is changed afterwards both the battery and mains supply must be disconnected for 10 seconds to enable the EM PRO G2 to read the new link position on reconnection of the battery and mains. It will lead to a false battery failure indication if the link is changed after installation without this reset.

Wiring guidelines

To ensure that a luminaire containing high frequency emergency units complies with EN 55015 for radio frequency conducted interference in both normal and emergency mode it is essential to follow good practice in the wiring layout.

Within the luminaire the switched and unswitched 50 Hz supply wiring must be routed as short as possible and be kept as far away as possible from the lamp

This means, for example, in a linear T8 or T5 luminaire the mains wiring should be routed along one side of the luminaire body, while the wires to the emergency lamp from the emergency module are routed along the other side.

The high frequency emergency lamp wiring contains "hot" leads at pins 5 and 6, which have high voltage to earth. These should be kept as short as possible and

separated from other wiring to minimize coupling. They also have a restriction on capacitance to other wiring and earth of 100 pF, which must be observed to ensure good lamp starting.

With an earth connection of the metal case of the emergency module the noise suppression can be further improved. The wiring of the earth should be kept as short as possible.

Through wiring may affect the emc performance of the luminaire.

With the use of the fifth pole possible compatibility problems between the products can be prevented. Depending on the luminaire wiring the radio suppression in the emergency mode of operation can be further improved.

Capacitive loading limits of lamp leads must not be exceeded. Note the capacitance of the emergency lamp leads adds to the capacitance of the leads from the ballast to the EM PRO G2 module when considering ballast loading.

The LED and test switch wiring should be routed separately and kept as far away as possible from the high frequency lamp leads to avoid coupling.

To avoid the damage of the control gear, the wiring must be protected against short circuits to earth (sharp edged metal parts, metal cable clips, louver, etc.).

Standards


- EN 61347-2-7
- EN 60925
- EN 55015
- EN 61000-3-2
- EN 61000-3-3
- EN 61547
- EN 60068-2-64
- EN 60068-2-29
- EN 60068-2-30
- DALI standard EN 62386-202
- according to EN 50172
- according to EN 60598-2-22
- according to EN 62034

Maximum loading of automatic circuit breakers


Automatic circuit breaker type	B10	B13	B16	B20	C10	C13	C16	C20	Inrush current	
Installation Ø	1.5 mm ²	1.5 mm ²	1.5 mm ²	2.5 mm ²	1.5 mm ²	1.5 mm ²	1.5 mm ²	2.5 mm ²	I _{max}	time
EM 03 PRO G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 04 PRO G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 05 PRO G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 06 PRO G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 03 PRO NIMH G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 04 PRO NIMH G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 05 PRO NIMH G2	90	130	130	130	180	260	260	260	10 A	120 µs
EM 06 PRO NIMH G2	90	130	130	130	180	260	260	260	10 A	120 µs

EM PRO G2 emergency module wiring diagrams


Not for use with magnetic ballasts and switch start circuits

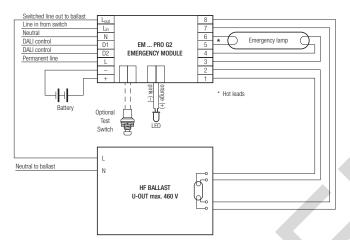


Wiring diagram for single lamp high frequency ballasts

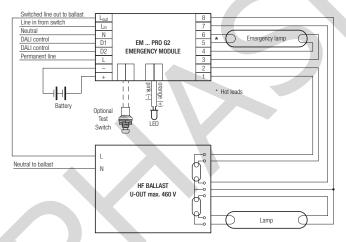


Wiring diagram for twin lamp high frequency ballasts with 7 terminals $\,$

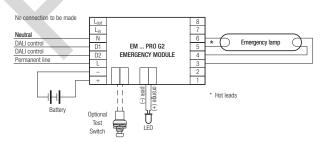

Wiring diagram for non-maintained operation

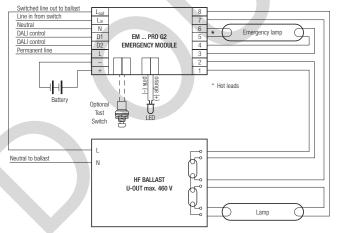

Wiring diagram for twin lamp high frequency ballasts with 6 terminals

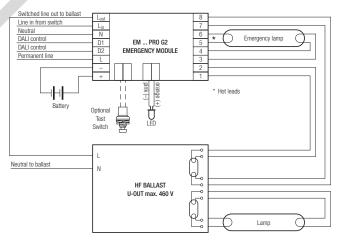

Wiring diagram for twin lamp high frequency ballasts with 8 terminals $\,$

Note: All hot leads normally marked with an * should be kept as short as possible. For comprehensive wiring diagrams and instructions consult the Tridonic website www.tridonic.com

Additional information

Additional technical information at <u>www.tridonic.com</u> \rightarrow Technical Data

Guarantee conditions at <u>www.tridonic.com</u> → Services

Life-time declarations are informative and represent no warranty claim. No warranty if device was opened.